

Before You Begin Configuring the SRC Software on a C-series Controller

Before you begin configuring the SRC software on a C-series Controller, be sure that:

- You are familiar with how to use the SRC CLI.
 - Initial system setup and configuration have been completed, including configuration for:
 - C-series Controller hostname
 - Initial configuration for the Juniper Networks database and the database enabled on the system



NOTE: The Juniper Networks database must be running before you start configuring the SRC software.

- Domain name system
 - Eth0 interface
 - An administrative account that has superuser privileges
-



CAUTION: Although root access is used for initial configuration of a C-series Controller, user accounts are used to enter commands and statements at the CLI.

- Telnet and or SSH access

Related Topics

- *C-series Hardware Guide*
- Before You Start the SRC CLI
- Configuring the SRC Software
- Configuring SRC Components
- Components in an SRC Deployment
- How the SRC Configuration Is Stored

