

Configuring the Client Secret for the External Subscriber Monitor

To configure trusted clients for External Subscriber Monitor:

1. Click **Configure > Slot**, then a specified slot (for example, slot0).
2. Expand **External Subscriber Monitor**.
3. Expand **Radius Accounting** , and click **Client**.

The Client pane appears.

4. Enter information as described in the Help text in the main pane, and click **Apply**.

