

Configuring Eventing Properties for External Subscriber Monitor

Use the following configuration statements to configure directory eventing properties for External Subscriber Monitor:

```
slot number external-subscriber-monitor initial directory-eventing {  
    eventing;  
    signature-dn signature-dn;  
    polling-intervall polling-interval;  
    event-base-dn event-base-dn;  
    dispatcher-pool-size dispatcherr-pool-size;  
}
```

To configure directory eventing properties:

1. From configuration mode, access the configuration statement that configures the directory eventing properties.

```
user@host# edit slot 0 external-subscriber-monitor initial directory-eventing
```

2. Specify the initial directory eventing properties for External Subscriber Monitor.

```
[edit slot 0 external-subscriber-monitor initial directory-eventing]  
user@host# set ?
```

For more information about configuring local properties for the SRC components, see [Configuring Initial Directory Eventing Properties for SRC Components](#).

3. (Optional) Verify your configuration.

```
[edit slot 0 external-subscriber-monitor initial directory-connection]  
user@host# show
```

