

## Configuring Initial Properties for External Subscriber Monitor

---

Use the following configuration statements to configure initial properties for External Subscriber Monitor:

```
slot number external-subscriber-monitor initial {  
    dynamic-dn dynamic-dn;  
}
```

To configure initial local properties:

1. From configuration mode, access the configuration statement that configures the initial properties.

```
user@host# edit slot 0 external-subscriber-monitor initial
```

2. Specify the properties for External Subscriber Monitor.

```
[edit slot 0 external-subscriber-monitor initial]  
user@host# set ?
```

For more information about configuring local properties for the SRC components, see [Changing the Location of Data in the Directory](#).

