

Stopping External Subscriber Monitor

To stop External Subscriber Monitor:

- Stop External Subscriber Monitor from its installation directory.

user@host# **disable component extsubmon**

- Related Topics**
- Stopping External Subscriber Monitor with the C-Web Interface
 - Starting External Subscriber Monitor
 - Viewing Statistics for External Subscriber Monitor
 - Overview of External Subscriber Monitor

