

Setting Up the SRC-VTA to Send E-Mail Notifications

Use the mailer processor to specify the SMTP server to use for e-mail messages that the SRC-VTA sends to subscribers.

To configure the mailer processor:

1. In the VTA Configuration Manager navigation pane, select **Edit**.
2. Under Current Configuration, select **Processors**.

A list of processors appears.

The screenshot displays the Juniper VTA Configuration Manager web interface. At the top, the Juniper Networks logo is on the left, and the title 'VTA Configuration Manager' is in the center, with 'Edit Configuration' on the right. A navigation pane on the left contains a tree structure with 'Home', 'Dir Connection', 'Configuration' (expanded), 'Create', 'Edit' (selected), 'Load', 'Commit', 'Import', and 'Export'. The main content area is titled 'Current Configuration' and has three tabs: 'Event Handlers', 'Actions', and 'Processors' (selected). Under 'Processors', there is a section 'Quota VTA Processors' with four entries: 'Database Engine Processor' (Disable), 'Mailer Processor' (Enable), 'SAE Proxy Processor' (Disable), and 'Script Runner Processor' (Enable). The Juniper yourNet logo is at the bottom right of the interface.

3. Click **Enable** to enable the processor and display the configuration page for the mailer processor, or click **Mailer Processor**.

The Mailer Processor screen appears.

- ▶ Home
- ▶ Dir Connection
- ▼ Configuration
 - ▶ Create
 - ▶ Edit
 - ▶ Load
 - ▶ Commit
 - ▶ Import
 - ▶ Export


Current Configuration

Event Handlers
Actions
Processors

Quota VTA Processors

Mailer Processor Enable

Name	Value
SMTP Server	<div style="border: 1px solid #ccc; padding: 5px;"> <input style="width: 90%;" type="text"/> </div>
Save	



4. Fill in the SMTP server box, and click **Save**.
5. Configure an action for the mailer processor. See Configuring the SRC-VTA to Send E-Mail Notifications .

- Related Topics**
- Configuring the SAE Proxy Processor
 - Configuring the SRC-VTA to Manage Subscriber Accounts
 - Database Engine Processor Fields

Mail Processor Field

SMTP Server

- SMTP server for outgoing e-mail.
- Value—Hostname or IP address of the SMTP server
- Default—No value