

## Installing a Pilot License (C-Web Interface)

---

You install pilot licenses on C-series Controllers from the C-Web interface. Before you install a pilot license, make sure that the Juniper Networks database is running on a C-series Controller.

When you enable the SAE on a C-series Controller, the software verifies that a license is installed.

To install a pilot license:

1. Click **Manage > Request > SAE > Import Pilot License**.

The Import Pilot License pane appears.

2. Enter information as described in the Help text in the main pane, and click **OK**.
3. Click **Monitor > SAE > Licenses** to verify that a valid license is available.

- Related Topics**
- Obtaining an SRC License
  - Overview of the SRC License Server
  - Types of SRC Licenses

