

## Accessing the Router CLI

---

You can access the CLIs of Juniper Networks routers through a Telnet or secure shell connection.

- To open a Telnet session to a router, use the **telnet** operational mode command. For example:

```
user@host> telnet 10.10.10.3
```

- To open a secure shell connection, use the **ssh** operational command. For example:

```
user@host> ssh host 10.10.10.3
```

### Related Topics

- Specifying Router Initialization Scripts on the SAE with the CLI
- Starting the SRC Client on a JUNOS Router
- Developing Router Initialization Scripts for JUNOS Routers, JUNOS Routing Platforms, and Network Devices

