

Restarting the JPS

To restart the JPS:

```
user@host> restart component jps
```

The system responds with a start message. If the JPS is already running, the system responds with a shutdown message and then a start message.

- Related Topics**
- Restarting the JPS (C-Web Interface)
 - Stopping the JPS
 - Configuring the JPS
 - Monitoring the JPS
 - Overview of the JPS

