

Starting the JPS

You must start the JPS when you install the JPS without rebooting the JPS host.

To start the JPS:

```
user@host> enable component jps
```

The system responds with a start message. If the JPS is already running, the system responds with a warning message.

- Related Topics**
- Starting the JPS (C-Web Interface)
 - Stopping the JPS
 - Configuring the JPS
 - Monitoring the JPS
 - Overview of the JPS

