

Restarting a NIC Agent (SRC CLI)

You can restart a NIC agent to have the agent read all data in the directory again. Restart a NIC agent if the agent is not synchronized with the directory, or if you switch from one directory to another.

To restart a NIC agent:

- From operational mode, restart the agent.

```
user@host>request nic restart agent name name
```

You can restart all NIC agents by omitting an agent name for the **request nic restart agent** command.

You can also restart a NIC agent at the slot level.

- Related Topics**
- Stopping a NIC Host on a C-series Controller (SRC CLI)
 - Restarting the NIC (SRC CLI)
 - Restarting a NIC Resolver (SRC CLI)
 - Changing NIC Configurations (SRC CLI)

