

## Running the Network Publisher

---

You run the network publisher each time you want to collect information from routing tables on JUNOS routing platforms.

Before you run the network publisher, make sure that:

- The network publisher is configured.
- The NIC is enabled.

To run the network publisher:

- From operational mode, run one of the following commands:

```
user@host> request network-publisher execute
```

```
user@host> request network-publisher slot 0 execute
```

- Related Topics**
- Before You Configure and Run the Network Publisher
  - Configuring the Network Publisher
  - Starting the NIC (SRC CLI)
  - Overview of the Network Publisher
  - Overview of Files to Test Network Publisher

