

## Stopping the SRC Client on a JUNOSe Router

---

JUNOSe routers use an SRC client to interact with the SAE. See *JUNOSe Broadband Access Configuration Guide* for complete information about configuring the SRC client on the JUNOSe router.

To stop the SRC client:

1. Access the router CLI.

See Accessing the Router CLI .

2. Access Global configuration mode.

```
host1#configure terminal
```

3. Switch to the virtual router for which you want to stop an SRC client.

```
host1(config)#virtual-router <vrName>
```

4. Disable the SRC client.

```
host1:<vrName>(config)#no ssrc enable
```

- Related Topics**
- Starting the SRC Client on a JUNOSe Router
  - Viewing Statistics for All JUNOSe Device Drivers (SRC CLI)

