

## Stopping the SAE with the C-Web Interface

---

To stop the SAE:

1. Click **Manage > Disable**.

The Disable pane appears.

2. From the Component list, select **SAE**, and click **OK**.

- Related Topics**
- Stopping the SAE (SRC CLI)
  - Starting the SAE with the C-Web Interface
  - Role of the SAE

