

Viewing General Statistics for SRC-ACP (C-Web Interface)

Purpose View general statistics for SRC-ACP.

Action To view general statistics for SRC-ACP:

1. Click **ACP > Statistics > General**.

The Statistics/General pane appears.

The screenshot shows the Juniper C-Web Interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. On the left, a sidebar lists various configuration categories: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'ACP Statistics / General'. It features a 'Slot' input box with a value of '0'. To the right of the input box, a text box provides instructions: 'Number of the slot for which you want to configure values. Value: Currently, the chassis has only one slot. The valid value is 0. Default value: 0'. Below the input box are 'OK' and 'Reset' buttons. The footer of the interface displays the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice, Privacy.' and the Juniper logo with the tagline 'Juniper Your Net.'

2. In the Slot box, enter the number of the slot for which you want to display general statistics.
3. Click **OK**.

The Statistics/General pane displays general SRC-ACP statistics.

- Related Topics**
- Configuring SRC-ACP (C-Web Interface)
 - Viewing Statistics for the SRC-ACP Directory (C-Web Interface)
 - Viewing Device Statistics for SRC-ACP (C-Web Interface)

