

## Viewing Agent Statistics

**Purpose** View statistics for an agent.

**Action** 1. Click **Monitor > NIC > Statistics > Agent**.

The Statistics/Agent pane appears.

The screenshot shows the Juniper Networks web interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC (highlighted), NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'NIC Statistics / Agent'. It contains a form with a 'Name' text box and a 'Slot' dropdown menu (set to '0'). Below the form are 'OK' and 'Reset' buttons. The footer of the interface displays the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper your Net.'

2. In the Name box, enter the name of the agent for which you want to view statistics.
3. In the Slot box, enter the number of the slot for which you want to display agent statistics.
4. Click **OK**.

The Statistics/Agent pane displays the properties for the agent.

- Related Topics**
- Configuring a NIC Scenario (C-Web Interface)
  - Viewing Data for NIC Agents
  - Viewing Agents
  - Viewing Statistics for NIC Agents

