

Viewing Host Process Statistics

Purpose View NIC host process statistics.

Action 1. Click **Monitor > NIC > Statistics > Process**.

The Statistics/Process pane appears.

The screenshot shows the Juniper C-Web Interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various system components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC (highlighted), NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'NIC Statistics / Process'. It contains a 'Slot' label followed by a text input box. Below the input box are 'OK' and 'Reset' buttons. The footer of the interface displays the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display host process statistics.
3. Click **OK**.

The Statistics/Process pane displays the statistics for the host process.

- Related Topics**
- Configuring the NIC (C-Web Interface)
 - Viewing Host Statistics
 - Viewing Statistics for the NIC Process

