

Viewing Resolver Statistics

Purpose View statistics about resolvers.

Action 1. Click **Monitor > NIC > Statistics > Resolver**.

The Statistics/Resolver pane appears.

The screenshot shows the Juniper Networks C-Web Interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various system components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC (highlighted), NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'Statistics / Resolver' and contains two input fields: 'Name' and 'Slot' (with a value of 0). Below these fields are 'OK' and 'Reset' buttons. The footer of the interface displays the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper your Net.'

2. In the Name box, enter the name of the resolver for which you want to view statistics.
3. In the Slot box, enter the number of the slot for which you want to display resolver statistics.
4. Click **OK**.

The Statistics/Resolver pane displays the statistics for the resolver.

- Related Topics**
- Configuring the NIC (C-Web Interface)
 - Viewing Resolvers
 - Viewing Statistics for NIC Resolvers
 - Viewing Data for NIC Resolvers

