

# Viewing Data for NIC Resolvers

**Purpose** To interpret the data for resolvers, make sure that you have a good understanding of the NIC resolution process.

See Overview of the NIC Resolution Process.

View all NIC resolver data.

**Action** user@host> **show nic data resolver**

```
Component name
/realms/login/C1
Key
  Type
Vr
  String
default@dw2
Value
  Type
SaeId
  String
IOR:
000000000000003549444C3A736D67742E6A756E697065722E6E65742F7361652F5365727...
41637469766174696F6E456E67696E653A312E30000000000000020000000000000780...
0000000C31302E3232372E362E34330022610000000000226761726B6269742E6B616E6C6...
6E70722E6E65742F736165504F412F5341450000000000200000000000008000000004...
000000010000001C00000000001000100000001050100010001010900000001050100010...
0000002C000000000000001000000010000001C0000000000100010000001050100010...
0000000105010001...
Key
  Type
Vr
  String
vr1495@marvin
Value
  Type
SaeId
  String
...
```

**Meaning** Table 1 on page 1 describes the output fields for the `show nic data resolver` command. Output fields are listed in the order in which they appear.

**Table 1: Output Fields for show nic data resolver**

Field Name	Field Description
Component name	Name of a resolver. Resolver names have the format <i>/realms/ realm-name/resolver name</i> .
Key	Data type and value of a NIC key. The value is the actual value of the NIC key, not the NIC value to which the key maps.
Value	Data type and value of the NIC value that maps to the associated NIC key.

- Related Topics**
- Viewing Statistics for NIC Resolvers
  - Viewing Resolvers
  - Viewing Resolver Statistics
  - Viewing Data for NIC Agents