

Viewing Resolvers

Purpose View information about a resolver.

Action 1. Click **Monitor > NIC > Data > Resolver**.

The Data/Resolver pane appears.

The screenshot shows the Juniper C-Web Interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The 'Monitor' tab is selected, and the left sidebar shows a tree view with 'NIC' highlighted. The main content area is titled 'Data / Resolver' and contains three input fields: 'Maximum Results' (a text box), 'Name' (a text box), and 'Slot' (a text box with '0' entered). Below these fields are 'OK' and 'Reset' buttons. The bottom of the interface shows a copyright notice for Juniper Networks, Inc. and the Juniper logo.

2. In the Maximum Results box, enter the maximum number of results that you want to receive.
3. In the Name box, enter the name of the resolver for which you want to view data.
4. In the Slot box, enter the number of the slot for which you want to display resolver data.
5. Click **OK**.

The Data/Resolver pane displays the properties for the resolver.

- Related Topics**
- Configuring the NIC (C-Web Interface)
 - Viewing Resolver Statistics
 - Viewing Statistics for NIC Resolvers
 - Viewing Data for NIC Resolvers

