

Viewing Statistics for NTP (C-Web Interface)

Purpose Display statistics for NTP.

Action 1. Click **Monitor > NTP > Statistics**.

The Statistics pane appears.



2. To suppress symbolic addressing, select the **No Resolve** box.
3. Click **OK**.

The Statistics pane displays statistics for NTP.

- Related Topics**
- Specifying a Basic NTP Configuration on a C-series Controller (C-Web Interface)
 - Viewing Statistics for NTP (SRC CLI)
 - Viewing NTP Peers (C-Web Interface)
 - Viewing NTP Status (C-Web Interface)

