

## Viewing Internal Variables for NTP (SRC CLI)

---

**Purpose** View information about internal variables for NTP with the SRC CLI:

**Action** user@host> **show ntp status**

```
system peer:      menemsha.jnpr.net
system peer mode:  client
leap indicator:    00
stratum:          4
precision:        -20
root distance:     0.02245 s
root dispersion:   0.07689 s
reference ID:      [10.227.2.100]
reference time:    c922b152.86dd0529 Thu, Dec  7 2006 10:27:14.526
system flags:      auth monitor ntp kernel stats
jitter:           0.000183 s
stability:         1.728 ppm
broadcastdelay:    0.003998 s
authdelay:         0.000000 s
```

- Related Topics**
- Viewing NTP Peers (SRC CLI)
  - Viewing Statistics for NTP (SRC CLI)
  - Viewing NTP Peers (C-Web Interface)
  - Viewing Statistics for NTP (C-Web Interface)
  - Viewing NTP Status (C-Web Interface)

