

## Viewing the State of JUNOSe Device Drivers (C-Web Interface)

---

**Purpose** If the log files indicate a problem with a specific driver, review the configuration of the associated with the JUNOSe router driver with the C-Web interface.

**Action**

1. Click **Monitor > SAE > Drivers**.  
  
The Drivers pane appears.
2. Enter information as described in the Help text in the main pane, and click **OK**.  
  
The Drivers pane displays information about the JUNOSe device driver.

**Related Topics**

- Troubleshooting Problems with Managing JUNOSe Routers
- Monitoring Interactions Between the SAE and the JUNOSe Router
- Viewing Statistics for All JUNOSe Device Drivers (C-Web Interface)

