

## Viewing Statistics for Specific JUNOS Device Drivers (C-Web Interface)

**Purpose** View SNMP statistics about devices.

**Action** 1. Select **SAE** from the side pane, click **Statistics**, and then click **Device**.

The Device pane appears.

The screenshot shows the Juniper C-Web Interface. On the left is a navigation pane with a 'Monitor' header and a list of categories: ACP, CLI, Component, Date, Disk, Interfaces..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The main content area is titled 'SAE' and 'Device'. It contains a 'Device Name' text box, a 'Style' dropdown menu, and 'OK' and 'Reset' buttons. To the right of the 'Device Name' box is a tooltip that reads: 'Name of a device. Please enter: All or part of the device name. For JUNOS router drivers and PCMM drivers, use the format default@routerName.' To the right of the 'Style' dropdown is a tooltip that reads: 'Output style Choices: brief: Display only device names'. At the top right of the interface, it says 'Logged in as: admin' and has links for 'About', 'Refresh', and 'Logout'. At the bottom left, it says 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' At the bottom right, it says 'Juniper Your Net.'

2. In the Device Name box, enter a full or partial device name for which you want to display information, or leave the box blank to display all devices.
3. Select an output style from the Style list.
4. Click **OK**.

The Device pane displays statistics for all devices.

- Related Topics**
- Viewing Statistics for Specific JUNOS Device Drivers (SRC CLI)
  - Viewing the State of JUNOS Device Drivers (C-Web Interface)
  - Viewing Statistics for All JUNOS Device Drivers (C-Web Interface)

