

## Viewing Statistics for All JUNOSe Device Drivers (SRC CLI)

---

**Purpose** Display SNMP statistics for all JUNOSe device drivers.

**Action** Use the following operational mode command:

```
show sae statistics device common junose-cops
```

For example:

```
user@host> show sae statistics device common junose-cops
SNMP Statistics
Driver type                JUNOSE COPS
Number of close requests   0
Number of connections accepted 2
Number of current connections 1
Number of open requests    2
Server address             0:0:0:0:0:0:0
Server port                3288
Time since last redirect   186703
```

- Related Topics**
- [Troubleshooting Problems with Managing JUNOSe Routers](#)
  - [Viewing Statistics for Specific JUNOSe Device Drivers \(SRC CLI\)](#)
  - [Viewing the State of JUNOSe Device Drivers \(C-Web Interface\)](#)
  - [Viewing the State of JUNOSe Device Drivers \(C-Web Interface\)](#)
  - [Viewing Statistics for All JUNOSe Device Drivers \(C-Web Interface\)](#)

