

Viewing Statistics for Specific JUNOSe Device Drivers (SRC CLI)

Purpose Display statistics for a specific JUNOSe device driver.

Action Use the following operational mode command:

```
show sae statistics device <name name> < (brief) >
```

For example:

```
user@host> show sae statistics device name default@dryad
SNMP Statistics
Add notification handle time      6
Change notification handle time   0
Client ID                        default@dryad
Delete notification handle time   0
Failover IP                      0.0.0.0
Failover port                    0
Handle message time               60
Job queue age                    0
Job queue time                    4
Number message send               158
Number of added jobs              9
Number of add notifications       4
Number of change notifications    0
Number of delete notifications    0
Number of managed interfaces     4
Number of message errors          0
Number of message timeouts        0
Number of removed jobs           9
Number of user session established 0
Number of user session removed    0
Router type                      JUNOSE COPS
Up time                          172286
Using failover server             false
```

- Related Topics**
- Troubleshooting Problems with Managing JUNOSe Routers
 - Viewing Statistics for All JUNOSe Device Drivers (SRC CLI)
 - Monitoring Interactions Between the SAE and the JUNOSe Router
 - Viewing the State of JUNOSe Device Drivers (C-Web Interface)
 - Viewing the State of JUNOSe Device Drivers (C-Web Interface)

