

Viewing Information About Device Drivers

Purpose View information about the device drivers available on the SAE.

Action 1. Click **Monitor > SAE > Drivers**.

The Drivers pane appears.

The screenshot shows the Juniper SAE web interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The 'Monitor' menu is expanded, showing options like ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The 'SAE' menu item is expanded, showing the 'Drivers' pane. The 'Drivers' pane contains a form with the following fields: 'Device Name' (text box), 'Maximum Results' (text box), 'Slot' (text box with '0' entered), and 'Style' (dropdown menu). Below the form are 'OK' and 'Reset' buttons. The bottom of the interface shows the copyright notice: 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo.

2. In the Device Name box, enter a full or partial device driver name for which you want to display information, or leave the box blank to display all devices.

For JUNOSe router drivers, use the format:

< virtual router name > @ < router name >

For JUNOS router drivers and PCMM drivers, use the format:

default@<router name>

3. In the Maximum Results box, enter the maximum number of results that you want to receive.
4. In the Slot box, enter the number of the slot for which you want to display device information.
5. Select an output style from the Style list.
6. Click **OK**.

The Drivers pane displays the status of the devices running on the SAE.

- Related Topics**
- Connections to Managed Devices
 - Viewing SNMP Information for Routers and Devices with the CLI
 - Viewing Statistics for Device Drivers with the CLI

- Viewing Statistics for Specific Device Drivers with the CLI
- Viewing Information About SAE Device Drivers with the CLI