

Viewing SNMP Statistics for Devices

Purpose View SNMP statistics about devices.

Action 1. Click **Monitor > SAE > Statistics > Device**.

The Statistics/Device pane appears.

The screenshot shows the Juniper SAE web interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The 'Monitor' menu is expanded, showing 'ACP', 'CLI', 'Component', 'Date', 'Disk', 'Interfaces...', 'Iptables...', 'JPS', 'NIC', 'NTP', 'Redirect Server', 'Route...', 'SAE', 'Security', and 'System'. The 'SAE' menu item is selected, and the 'Statistics / Device' pane is displayed. This pane contains three input fields: 'Device Name' (a text box), 'Slot' (a text box), and 'Style' (a dropdown menu). To the right of these fields are instructions: for 'Device Name', it says 'Name of a device. Value: All or part of the device name.' with examples for JUNOS and PCMM drivers; for 'Slot', it says 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'; for 'Style', it says 'Output style Choices: brief: Display only device names Default: Detail'. At the bottom of the pane are 'OK' and 'Reset' buttons. The footer of the interface shows 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the 'Juniper your Net.' logo.

2. In the Device Name box, enter a full or partial device name for which you want to display information, or leave the box blank to display all devices.
3. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for devices.
4. Select an output style from the Style list.
5. Click **OK**.

The Statistics/Device pane displays statistics for all devices.

- Related Topics**
- Configuring SAE Properties for Global Default SNMP Communities for Use with JUNOS Routers and JUNOS Routing Platforms
 - Viewing SNMP Statistics for Specific Devices
 - Viewing SNMP Statistics for Subscriber Sessions and Service Sessions

