

Viewing SNMP Statistics for Client Licenses

Purpose View SNMP statistics for client licenses.

Action 1. Click **Monitor > SAE > Statistics > License > Client**.

The Statistics/License/Client pane appears.

The screenshot shows the Juniper Networks configuration interface. The top navigation bar includes tabs for Monitor, Configure, Diagnose, and Manage. The user is logged in as 'admin'. The left sidebar lists various configuration categories: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The main content area displays the 'SAE Statistics / License / Client' pane. It features a 'Slot' input field with a value of '0'. A tooltip explains: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. Below the input field are 'OK' and 'Reset' buttons. The footer contains copyright information for Juniper Networks, Inc. (2007) and the slogan 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for client licenses.
3. Click **OK**.

The Statistics/License/Client pane displays statistics for client licenses.

- Related Topics**
- Viewing SNMP Statistics for Licenses by Device
 - Viewing SNMP Statistics for Local Licenses
 - Viewing SNMP Information for Local Licenses with the CLI
 - Viewing SNMP Information for Client Licenses with the CLI
 - Viewing SNMP Information for Licenses on Virtual Routers with the CLI

