

## Viewing SNMP Statistics for Local Licenses

**Purpose** View SNMP statistics for local licenses.

**Action** 1. Click **Monitor > SAE > Statistics > License > Local**.

The Statistics/License/Local pane appears.

The screenshot shows the Juniper J-Web interface. At the top, there are tabs for Monitor, Configure, Diagnose, and Manage. The Monitor tab is selected, and the breadcrumb path is Statistics / License / Local. On the left, there is a navigation menu with various system components. The main area contains a form with a 'Slot' input field and 'OK' and 'Reset' buttons. A tooltip is displayed over the Slot field, stating: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. The footer of the interface includes the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for local licenses.
3. Click **OK**.

The Statistics/License/Local pane displays statistics for local licenses.

- Related Topics**
- Configuring SAE Properties for Global Default SNMP Communities for Use with JUNOS Routers and JUNOS Routing Platforms
  - Viewing SNMP Information for Local Licenses with the CLI
  - Viewing SNMP Information for Client Licenses with the CLI
  - Viewing SNMP Information for Licenses on Virtual Routers with the CLI
  - Viewing SNMP Statistics for Client Licenses
  - Viewing SNMP Statistics for Licenses by Device

