

Viewing Statistics for External Subscriber Event Notifications (C-Web Interface)

Purpose View statistics for the External Subscriber Monitor notifications.

Action 1. Click **Monitor > Ext Sub Monitor > Statistics > Event Notification**.

The Statistics/Event Notification pane displays the event notification statistics for the External Subscriber Monitor.

- Related Topics**
- Configuring Event Notification for External Subscriber Monitor
 - Viewing Statistics for External Subscriber Event Notifications (C-Web Interface) on page 1
 - Viewing Statistics for External Subscriber Monitor

