

## Navigating the C-Web Interface

The layout of the panes allows you to quickly navigate through the interface. You navigate the C-Web interface, move forward and backward, scroll pages, and expand and collapse elements as you do in a typical Web browser interface.

From the taskbar, select the C-Web task that you want to perform. Selecting the task displays related subtasks and objects in the side pane. The side pane and taskbar are available from all pages, allowing you to skip from one task or subtask to the other from any page in the interface.

You can easily navigate to most subtasks by selecting them from the side pane. On pages where you are required to take an action, buttons and links allow you to move to the next or previous page as you perform certain actions.

### Layout of the C-Web Interface

Each page of the C-Web interface is divided into the following panes, as shown in Figure 1 on page 1.

**Figure 1: C-Web Layout**



- Top pane—Displays identifying information and links.
- Main pane—Location where you monitor the SRC software or a C-series Controller by entering information in text boxes, making selections, and clicking buttons.
- Side pane—Displays subtasks of the Monitor task currently displayed in the main pane. Click an item to access it in the main pane.
- Bottom pane—Displays copyright and trademark information.


### Elements of the C-Web Interface

This section summarizes the elements of the top pane, side pane, and main pane of the C-Web interface.

## Top Pane Elements

The top pane comprises the elements shown in Figure 2 on page 2.

**Figure 2: Top Pane Elements**

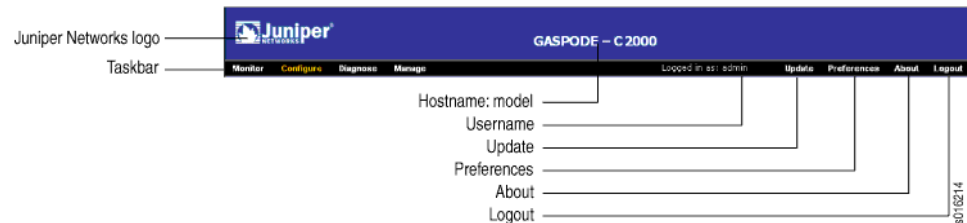


- Juniper Networks logo—Link to <http://www.juniper.net> in a new browser window.
- Taskbar—Menu of C-Web tasks:
  - Monitor—View monitoring information for core SRC components.
  - Configure—Configure SRC software on C-series Controllers.
  - Diagnose—Troubleshoot and test component settings.
  - Manage—Manage files and licenses, upgrade the software, and reboot the system.
- *hostname - model*—Hostname and model of the C-series Controller.
- Logged in as: *username*—Username you used to log in to the C-series Controller or the SRC software.
- Update—Update the display of tasks and objects after modifying SRC software.
- Preferences—Link to C-Web display and configuration preferences, such as the display of Help text.
- About—Link to information about the C-Web interface, such as the version number.
- Logout—Ends your current login session with the C-Web interface and returns you to the login page.

## Main Pane Elements

The main pane comprises the elements shown in Figure 3 on page 3.

**Figure 3: Main Pane Elements**

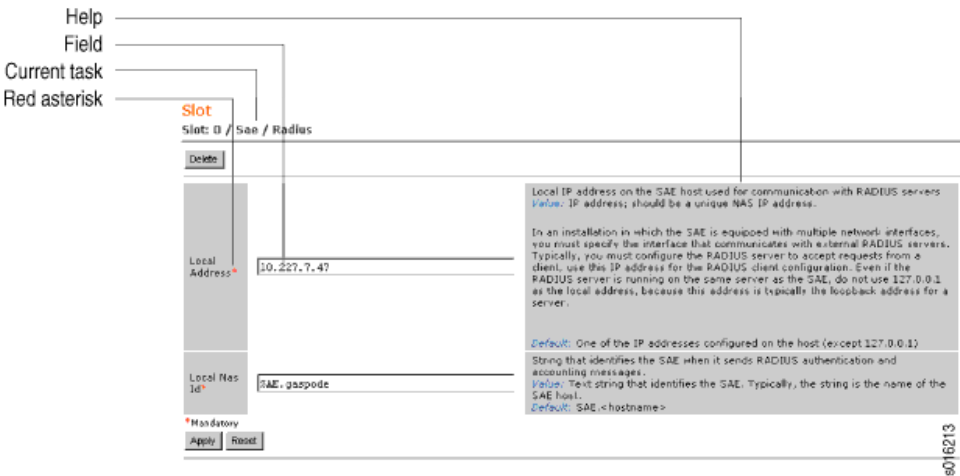


- **Help**—Displays field-specific information, such as the definition, format, and valid range of data in the field.
- **Current task**—Shows the successive C-Web tasks and subtasks you selected to display in the current main and side panes.
- **Red asterisk (\*)**—Indicates a required field.

### Side Pane Elements

The side pane comprises the elements shown in Figure 4 on page 4.

**Figure 4: Side Pane Elements**

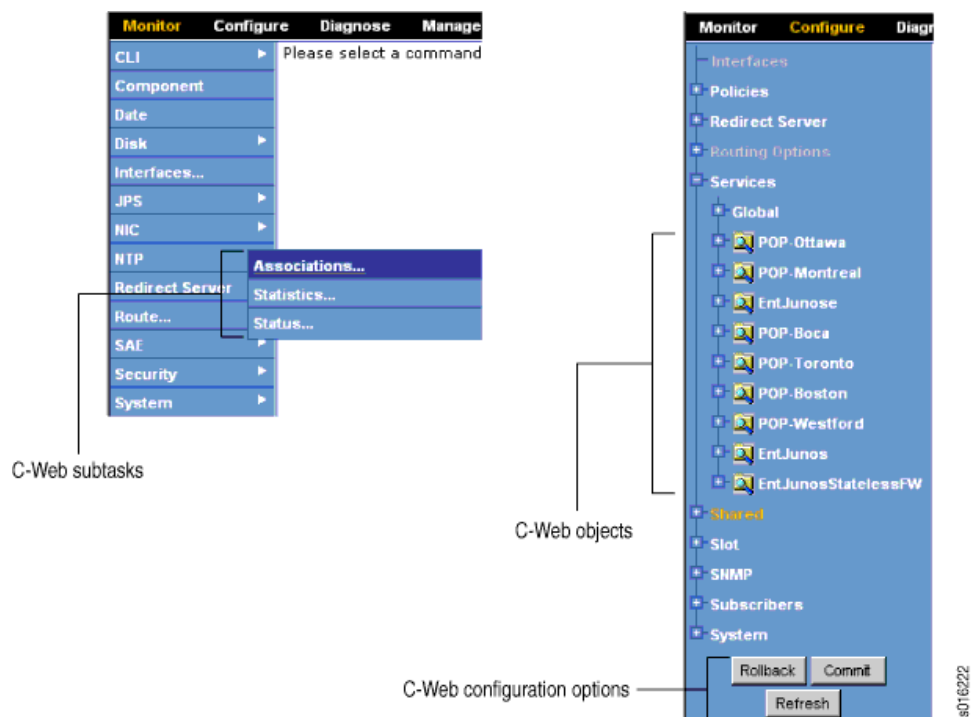

In the Monitor, Diagnose, and Manage side panes, each subtask displays options related to the selected task in the C-Web taskbar. In these side panes, click the arrow signs (>) to expand individual items. Figure 4 on page 4 shows an example of the Monitor side pane.

In the Configure side pane, each subtask displays options related to the selected task in the C-Web taskbar. Objects represent configuration that you have created. For example, Figure 4 on page 4 displays objects that represent services. Click the plus signs (+) to expand both individual subtasks and objects. Click the minus signs (-) to hide individual subtasks and objects.

To edit a configuration, click the configuration options buttons at the bottom of the Configure side pane. For more information, see [Editing SRC Configurations \(C-Web Interface\)](#).

- Related Topics**
- [C-Web Interface Overview](#)
  - [Getting Help in the C-Web Interface](#)