

## Configuration Statements for System Logging on a C-series Controller

---

Use the following configuration statements to configure the system log server at the [edit] hierarchy level.

```
system syslog file file-name (any | authorization | daemon | ftp | kernel | user | local7)
{
    (any | emergency | alert | critical | error | warning | notice | info | none);
}
system syslog host log-host-name (any | authorization | daemon | ftp | kernel | user |
local7) {
    (any | emergency | alert | critical | error | warning | notice | info | none);
}
system syslog user user-name (any | authorization | daemon | ftp | kernel | user |
local7) {
    (any | emergency | alert | critical | error | warning | notice | info | none);
}
```

For detailed information about each configuration statement, see the *SRC-PE CLI Command Reference*.

- Related Topics**
- Saving System Log Messages to a File (SRC CLI)
  - Sending System Log Messages to Other Servers (SRC CLI)
  - Sending Notifications for System Log Messages to Users (SRC CLI)
  - Overview of the C-series Controller Log Server

