

Changing the root Password for the SRC Software

An account for the user `root` is always present in the configuration. Only the `root` user can change the root password. You can change the `root` password with the SRC CLI, but not with the C-Web Interface.

To change the root password:

1. Log into the SRC software as `root`.
2. From operational mode, change the root password.

```
root@host> set cli password
Changing password for user root.
New UNIX password:
```

You can also create a regular account for `root` and set the SSH key there. The class for `root` is always `super-user`—if you create an account for `root`, the class is ignored.

- Related Topics**
- Configuring a System Login Announcement (SRC CLI)
 - Predefined Login Classes for the SRC Software
 - Login Class Permission Options for the SRC Software

