

## Configuring SRC-ACP

---

To use SRC-ACP in the SRC network, you must perform some configuration. For information about these configuration procedures, see:

1. (Optional) Creating Grouped Configurations for SRC-ACP
2. Configuring Local Properties for SRC-ACP
3. Configuring the SAE for SRC-ACP
4. Configuring SRC-ACP Properties
5. (Edge and dual mode only) Configuring SRC-ACP to Manage the Edge Network
6. (Backbone and dual mode only) Configuring SRC-ACP to Manage the Backbone Network
7. Starting SRC-ACP

You can automate and scale the configuration of congestion points using congestion point classification. For more information, see [Classifying Congestion Points](#).

- Related Topics**
- [Configuring SRC-ACP \(C-Web Interface\)](#)
  - [Viewing General Statistics for SRC-ACP \(C-Web Interface\)](#)
  - [Configuration Statements for SRC-ACP](#)
  - [Overview of SRC-ACP](#)

