

## Configuring Basic Local Properties for SRC-ACP

---

To configure basic local properties:

1. Click **Configure > Slot > Slot:0 > ACP**.
2. Enter information as described in the Help text in the main pane, and click **Apply**.

