

Removing an Authentication Method from the Authentication Order

To delete an authentication method from the authentication order:

- In the System pane, select the authentication method from the Selected Values list, and click the arrow button to move the authentication method to the Suggested Values list.

- Related Topics**
- Removing an SRC Authentication Method from the Authentication Order
 - Configuring Authentication Order

