

## Configuring TACACS+ Authentication (C-Web Interface)

---

To configure information about TACACS + servers for authentication:

1. Click **Configure**, expand **System**, and then click **Tacplus Server**.

The Tacplus Server pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

To configure a set of users that share a single account for authorization purposes, you create a template user.

- Related Topics**
- Configuring RADIUS and TACACS + Authentication on a C-series Controller
  - A C-series Controller as a RADIUS Client and TACACS + Client
  - Removing an SRC Authentication Method from the Authentication Order
  - Example: Configuring SRC Authentication
  - Configuring RADIUS Authentication (C-Web Interface)
  - Configuring Authentication Order

