

## Adding a Service Scope

---

To add a service scope:

1. Add a service scope with the SRC CLI or the C-Web interface.

See [Configuring Service Scopes \(SRC CLI\)](#) and [Configuring Service Scopes \(C-Web Interface\)](#)

2. Optionally, configure a precedence for the service scope.

### Related Topics

- [Setting Up Script Services for DPI](#)
- [Service Activation and Deactivation in a DPI Environment](#)
- [Configuring Subscriptions to DPI Services](#)
- [Creating a DPI Script Service](#)
- [Configuring the Script Service](#)

