

## Configuring JPS to Send Log Messages to System Logging Facility

---

To configure logging destinations to send log messages to the system logging facility:

1. From configuration mode, access the configuration statement that configures the name and type of logging destination. In this sample procedure, the logging destination called log5 is configured.

```
user@host# edit slot 0 jps logger log5 syslog
```

2. Specify the properties for the logging destination.

```
[edit slot 0 jps logger log5 syslog]  
user@host# set ?
```

For more information about configuring properties for the logging destination, see Overview of Logging for SRC Components.

3. (Optional) Verify your configuration.

```
[edit slot 0 jps logger log5]  
user@host# show
```

- Related Topics**
- Overview of the JPS
  - Configuring the JPS
  - Configuring Logging Destinations for the JPS
  - Configuring JPS to Store Log Messages in a File

