

Before You Configure and Run the Network Publisher

Before you configure and run the network publisher:

- Verify the version of the JUNOS software that is running on each JUNOS routing platform.

Typically, all the JUNOS routing platforms should run the same version of the JUNOS software.

- Verify that the C-series Controller can connect to the SAE-managed JUNOS routing platforms.
- Make sure that an SSH (recommended) or a Telnet service is enabled on each router from which the network publisher is to collect interface information.

When you run the network publisher, it connects to a number of JUNOS routing platforms through the configured protocol.

- Identify the routing tables and elements in the routing tables from which you want the network publisher to collect information. Which tables and elements you select depends on the application to use the NIC OnePopStaticRouteIp or the OnePopVrfIp configuration scenario.
- Before you run the network publisher, make sure that the NIC is enabled.

Related Topics

- Configuring the Network Publisher (C-Web Interface)
- Starting the NIC (SRC CLI)
- Configuration Statements for the Network Publisher
- Configuring the Network Publisher
- Overview of the Network Publisher

