

## Configuring NTP Client Mode for a C-series Controller (C-Web Interface)

---

To configure an NTP server that the C-series Controller uses for time synchronization:

1. Click **Configure**, expand **System**, and then click **NTP**.

The NTP pane appears.

2. In the Create new list, select **Server**. Type an IPv4 or IPv6 address for the server, and click **OK**.

The Server pane appears.

3. Enter information as described in the Help text in the main pane, and click **Apply**.



**NOTE:** If the remote system has authentication enabled, specify an authentication key and value. The system transmits the specified authentication key when transmitting packets.

---

- Related Topics**
- NTP Support on C-series Controllers
  - Configuring NTP on a C-series Controller

