

Configuring Local Parameters (SRC CLI)

You create local parameters within a policy group. Use the following configuration statements to configure local parameters.

```
policies group name local-parameters name {  
    description description ;  
    default-value default-value ;  
    type type ;  
}
```

To configure local parameters:

1. From configuration mode, enter the local parameter configuration. For example, to configure a local parameter called `bandwidthFactor`:

```
user@host# edit policies group policer local-parameters bandwidthFactor
```

2. (Optional) Enter a description for the parameter. You can provide extra information and examples of how the parameter is used.

```
[edit policies group policer local-parameters bandwidthFactor]  
user@host# set description description
```

3. (Optional) Configure a default value that the policy engine uses if no other values are provided during the parameter value acquisition process.

See Parameter Types for valid values of each parameter type.

```
[edit policies group policer local-parameters bandwidthFactor]  
user@host# set default-value default-value
```

4. (Optional) Set the type of attribute for which you can use the parameter.

```
[edit policies group policer local-parameters bandwidthFactor]  
user@host# set type type
```

5. (Optional) Verify your configuration.

```
[edit policies group policer local-parameters bandwidthFactor]  
user@host# show  
default-value 1024*1024;  
type rate;
```

- Related Topics**
- Overview of Global and Local Parameters
 - Configuring Local Parameters (C-Web Interface)
 - Configuring Global Parameters (SRC CLI)
 - Defining Parameters for the SRC Software

