

## Enabling the Redirect Server

---

To enable the redirect server:

```
user@host> enable component redir
```

- Related Topics**
- Before You Configure the Redirect Server on a C-Series Controller
  - Configuring the Redirect Server (SRC CLI)
  - Overview of Traffic Redirection

