

Configuring the SAE to Manage Third-Party Devices

To configure SAE drivers for third-party devices:

1. Click **Configure**, and expand **Driver**.
2. To configure the SAE to manage AAA NAS groups, under Driver expand **Aaa**, and then click **Create**. Enter information as described in the Help text in the main pane, and then click **Apply**.
3. To configure the SAE to manage PCMM devices, under Driver expand **PCMM**, and then click **Create**. Enter information as described in the Help text in the main pane, and then click **Apply**.
4. To configure device scripts, under Driver expand **Scripts**, and then click **Create**. Enter information as described in the Help text in the main pane, and then click **Apply**.

Related Topics ■ Configuring SAE Properties for Global Default SNMP Communities for Use with JUNOS Routers and JUNOS Routing Platforms

