

Configuring the SAE to Manage PCMM Devices (C-Web Interface)

The SAE connects to the PCMM device by using a COPS over TCP connection. The PCMM device driver controls this connection.

To configure the SAE to manage PCMM devices:

1. Click **Configure**, expand **Shared > SAE > Configuration > Driver**, and then click **PCCM**.

The PCCM pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

Related Topics

- For information about setting up SAE groups, see [\[Unresolved xref\]](#)
- Configuring the SAE to Manage PCMM Devices with SRC CLI
- Configuring PCMM Record-Keeping Server Plug-Ins with SRC CLI
- Using the SAE in a PCMM Environment

