

Modifying Failover Server Parameters (C-Web Interface)

To modify failover server parameters:

1. To view the router or device instances:
 - a. Click **Monitor > SAE > Drivers**.

The Drivers pane appears.
 - b. Enter information as described in the Help text in the main pane, and click **OK**.
2. To modify failover server parameters:
 - a. Click **Manage > SAE > Request > Modify > Device > Failover**.

The Failover pane appears.
 - b. Enter information as described in the Help text in the main pane, and click **OK**.

- Related Topics**
- Modifying Failover Server Parameters
 - Viewing Information About Device Drivers
 - Viewing Statistics for Device Drivers with the CLI
 - Viewing Statistics for Specific Device Drivers with the CLI

