

Configuring Logging Destinations to Send Messages to the System Logging Facility (SRC CLI)

Use the following configuration statements to configure system logging for IMS:

```
slot number ims logger name ...
slot number ims logger name syslog {
    filter filter;
    host host;
    facility facility;
    format format;
}
```

To configure logging destinations to send log messages to the system logging facility:

1. From configuration mode, access the configuration statement that configures the name and type of logging destination. In this sample procedure, the logging destination called log2 is configured.

```
user@host# edit slot 0 ims logger log2 syslog
```

2. Specify the properties for the logging destination.

```
[edit slot 0 ims logger log2 syslog]
user@host# set ?
```

For more information about configuring properties for the logging destination, see Configuring System Logging (SRC CLI).

3. (Optional) Verify your configuration.

```
[edit slot 0 ims logger log2 syslog]
user@host# show
```

Related Topics ■ Configuring Logging Destinations to Store Messages in a File (SRC CLI)

