

## Configuring Initial Properties for IMS (SRC CLI)

---

Use the following configuration statements to configure initial properties for IMS:

```
slot number ims initial {  
    static-dn static-dn;  
    dynamic-dn dynamic-dn;  
}
```

To configure initial local properties:

1. From configuration mode, access the configuration statement that configures the initial properties.

```
user@host# edit slot 0 ims initial
```

2. Specify the properties for IMS.

```
[edit slot 0 ims initial]  
user@host# set ?
```

For more information about configuring local properties for SRC components, see [Configuring Basic Local Properties](#).

3. (Optional) Verify your configuration.

```
[edit slot 0 ims initial]  
user@host# show
```

- Related Topics**
- Overview of an IMS Environment
  - Configuring the IMS Software (SRC CLI)
  - Configuring Initial Directory Eventing Properties for IMS (SRC CLI)
  - Configuration Statements for IMS Support

