

Configuring the SNMP Agent (C-Web Interface)

To configure the SNMP agent to control its operation:

1. Configure information supplied by the SNMP agent, including the listening address and system information.

See [Configuring System Information for the SNMP Agent \(C-Web Interface\)](#) .

2. Configure access control for the SNMP agent, including access for SNMPv3 users, SNMPv1 and SNMPv2 communities (traditional access control), and the view-based access control model (VACM).

See [Configuring Access Control for SNMPv3 Users \(C-Web Interface\)](#) .

See [Configuring Access Control for Communities \(C-Web Interface\)](#) .

See [Configuring Access Control for the VACM \(C-Web Interface\)](#).

3. Configure active monitoring.

See [Configuring Notification Targets \(C-Web Interface\)](#).

- Related Topics**
- [Configuring the SNMP Agent](#)
 - [Configuring System Information for the SNMP Agent \(C-Web Interface\)](#)
 - [Configuring Access Control for SNMPv3 Users \(C-Web Interface\)](#)
 - [Configuring an SNMP Alarm on a C-series Controller \(SRC CLI\)](#)

